


## LS C120 d II




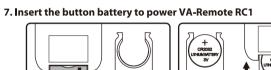


Remove battery compartment

Operations


## 1. Press the power button to on/off the light

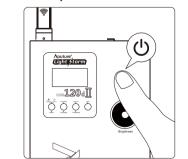

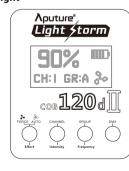

#### 1) Rotate the wheel to adjust the brightness from 0-100%



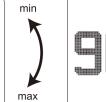





The Aputure I S C120D II is a complete re-design of the original C120D. We've taken all of your favorite

#### Instructions

 Please read and follow these instructions and keep well this manual for further use. Please unlock the protection cover before using.

 Please do not block the ventilation and do not look at the light directly when it's on Please do not place the LED light device close to liquids or other flammable objects.

 Keep the device out of reach of children Only use a microfiber and dry cloth to clean the product.

To reduce the risk of fire or electric shock, do not use the product near water. • Please have the product checked by an authorized service or agent if your product has a problem. The malfunctions caused by your no allowed disassembling are not under the warranty.

 Use of original Aputure cable accessories is recommended. Please note that this warranty does not apply to repairs arising out of the malfunction of non-original Aputure accessories, although you may request such repairs on a chargeable basis The product is certificated by RoHS, CE, KC, PSE and FCC. Please operate the product in full

compliance with the operation standards. Please note that this warranty does not apply to repairs arising from malfunction, although you may request such repairs on a chargeable basis. The instructions and information in this manual are based on thorough, controlled company testing

procedures. Further notice will not be given if the design or specifications change.


## FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference, and(2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try Reorient or relocate the receiving antenna. Detailed product manual for Light Storm can be found on www.aputure.com .

2) Short press the Auto/Force button to adjust the cooling fan between Auto mode and

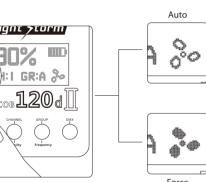

② Force Mode: The cooling fan operates at the fastest speed. (Highly recommended when shooting in high

① Press the Effect button for 2 seconds to active Lighting Effect mode, then short press the Effect button to shift effects between Paparazzi, Fireworks, Fault bulb,



a. Paparazzi Mode

Int Frq

• Connect the equipment into an outlet on a circuit different from that to which the receiver is Consult the dealer or an experienced radio/TV technician for help. RF warning statement:

Increase the separation between the equipment and receiver

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


c. Fault bulb Mode


100%


100%


e. TV Mode


**Check list** 

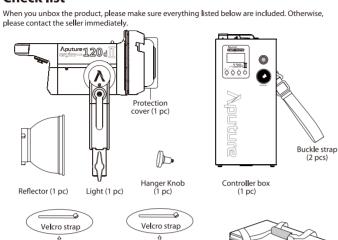

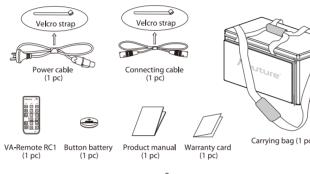


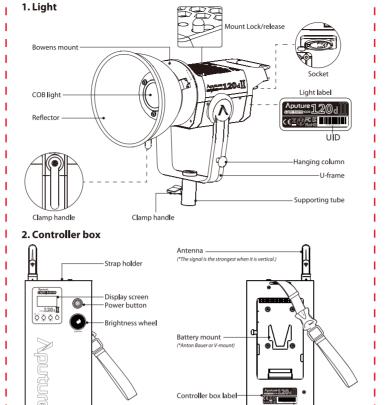

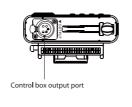

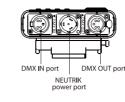

## 3. VA-Remote RC1

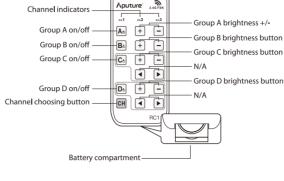


## 4. Display screen

3) Dimming brightness and CCT

сн1 сн2

CCT (Only for bi-color lights)

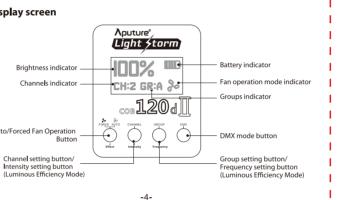

Press A/B/C/D to on/off the light, press +/- to dim the light from 0 to 100%, and press </> to dim





# 2. Detach and Attach the Protection Cover Pull the lock backwards, rotate the cover clockwise, then detach the cover.

## 3. Reflector install and unlock

Pull ejector handle back, and install reflector as the picture shows. Unlock reflector rotate in the


See the interface definition of the DMX as the picture shows.

(Primary Data Link)


Data 2- (Optional

GROUP button and rotate the wheel to set the GROUP.

Set the light at your desired angle, then use the clamp handle to install the light onto stand and faster

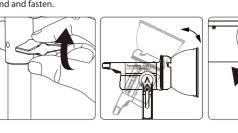


#### 5. Use connecting cable connect light to controller box

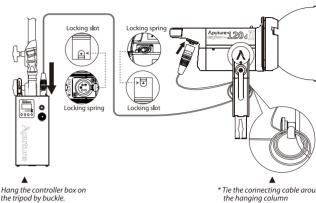


Please pull the connect cable out by pushing the locking spring down on the light and controller box.

1) Powered by AC

6. Dual power supply

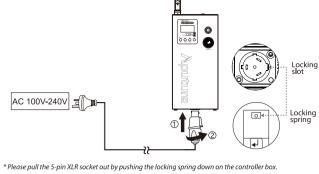

#### 2) Powered by the battery

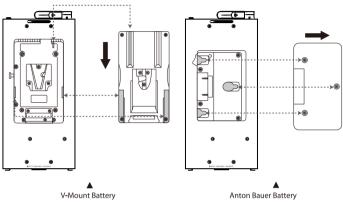


\* Battery output current≥13A, Voltage 12~16.8V; \* Please buy the battery base on the model of the Light Storm you choose; \* Please make sure to purchase the correct battery base, e.g. IDX DUO-C198

## Specifications

1) Connect DMX controller OUTPUT to C120D II controller INPUT.

5. Controlling Effects Via DMX

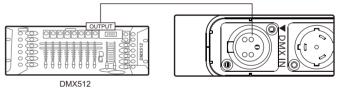

2) Long press Effect button to activate Lighting Effect mode, then short press DMX button to activate DMX control.



3) Under Effect mode, short press Effect button to shift effects between Paparazzi, Fireworks, Fault bulb, Lightning, and TV. 4) Adjusting the intensity and frequency via standard DMX console.

① Under DMX mode, rotate the wheel to select DMX channel.



② One light DMX control. When the light is set at CH DMX 001, the DMX controller can dim to brightness on CH 001 and adjust frequency on CH 002. (The CH number to adjust frequency is always the subsequent one).

Under DMX control mode, you can only control intensity and frequency. \* Multiple lights DMX control. When using two lights (A and B), we suggest to set A at CH 1 and B at CH 3, to control A via CH 1 and CH 2 on the DMX controller; to control B via CH 3 AND CH 4 on

	Operation Current		<2A	Power Consumption	180W maximu
	Power Supply		AC 100~240V 50/60Hz	Cooling Mode	Active Coolin
	TLCI		≥97	Color Temperature	5500K
	CRI		≥96	Channels	1/2/3
	Radio Frequency		2.4GHz	Remote Ability	≤100m
	Groups		A/B/C/D		
	Sizes (L*W*H)	Light	300*193*124 mm		
		Controller box Anton Bauer Battery	314*119*51mm		
		Controller box (V-Mount)	314*119*62.6mm		

#### Brightness (average)

Distance	0.5m	1m	2m
Footcandles	2788	651	158
LUX	30000	7000	1700


\*This is an averaged result, the number might be slightly different on each light.

#### Trademarks

Bowens is a trademark or registered trademark of Bowens in the P.R.C and other countries. Anton bauer is a trademark or registered trademark of Anton bauer in the US and other countries. IDX is a trademark or registered trademark of IDX in the JP and other countries.


"Channel 1 ,Group A" is by default.

## 2. Manual controlled by the controller box

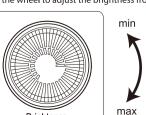



Install button battery and insert it into the VA-Remote RC1

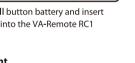

## 3) Lighting Effect Mode

100%

Fireworks 100%

Int

d. Lightning Mode

Lightning 100%

② Under Lighting Effect mode, short press the INT button to activate Intensity Adjust. Then rotate the wheel to adjust intensity from 10% to 100% as displayed on the screen



3 Under Lighting Effect mode, short press FRQ button to activate Frequency Adjust. Then rotate the wheel to adjust it from 1 to 10.



\*If the power was cut off accidentally, the last setting will be restored automatically when the power

#### You can control the LS C120d II from any channel or group configuration \*The Light Storm has three channels (1/2/3) and four groups (A \ B \ C \ D).

3. Remote Control

1) Setting on controller box

The controller setting is finished

**Product Details** 

The Press CHANNEL button to select 1, 2, or 3.

② Press GROUP button to select group A, B, C, or D.

2) Setting on the remote

100 Ch**2** 

Press the CH button to select channel

\*Please note this remote is used to control or work under Lighting Effect mode. 4.The DMX control 1) Connect a standard DMX console Only one Light Storm

) DMX Control

Under DMX mode, match the channel of your DMX controller with the light, then adjust accordingly. \* Channel 1 is by default under DMX mode. DMX channel range is 1 to 512 on LS C120D II.

Signal Common -

Data 2+ (Ontional

2) DMX Settings

Press DMX button to activate DMX mode

② When DMX mode is on, press CHANNEL button and rotate the wheel to set the channel; press